


Manual Release Mechanisms for BFT Gate Operators – Which motor have you got ? See below :

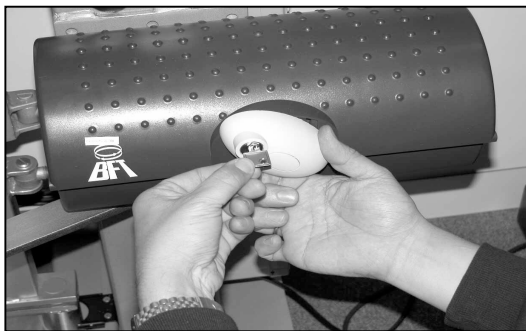

BFT 'IGEA' Articulated Arm.

Turn the key in the lock and rotate the coloured plastic knob on the front of the motor to release the gate. Reverse the process when power is re-instated.

BFT 'PHOBOS' Mechanical Ram.

Key release is on top of the motor at the gate post end. Rotate clockwise to release. Anti-clockwise to re-instate.



BFT 'VIRGO' Articulated Arm.

Key release is within black pull handle at front of motor. Rotate clockwise to unlock and pull black handle. Rotate anti-clockwise to re-instate.

BFT 'LUX' Hydraulic Rams

Key release is underneath the ram 12" from the gate post end. Rotate the triangular brass keyway anti-clockwise fully to release the locking. Open gate very slowly. Reverse process to re-instate.



BFT 'ORO' Hydraulic Ram

Key release is on top of motor 10" from the gate post end. Rotate triangular keyway anti-clockwise to release and open gate v. slowly. Reverse process to re-instate.

BFT 'SUB' Hydraulic Underground
Rotate & remove circular cap on top of black motor casing to reveal brass triangular keyway below. Use key to rotate this anti-clockwise fully to release gate and open v. slowly. Reverse process to re-instate

BFT 'ELI 250' Mechanical Underground.

Place the key on the triangular keyway in the drive arm beneath the gate. Rotate clockwise to release the lock. Pull the gate free from the drive arm and open. Reverse the process to re-instate.



BFT 'ICARO' & DEIMOS

Sliding Gate Motors.

Turn key in lower front of motor casing and rotate coloured knob to release gate. Reverse process to re-instate

